





Emergency Standby Power (ESP):

Applicable for supplying power to varying electrical load for the duration of power interruption of a reliable utili ty source. Emergency Standby Power (ESP) is in accordance with ISO 8528. Fuel Stop power in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.

Prime Power (PRP):

Applicable for supplying power to varying electrical load for unlimited hours. Prime Power (PRP) is in accordance with ISO 8528. Ten percent overload capabili ty is avai lable in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514.

Continuous Power (COP):

Applicable for supplying power continuously to a constant electrical load for unlimi ted hours. Continuous Power (COP) in accordance wi th ISO 8528, ISO 3046, AS 2789, DIN6271 and BS 5514.

POWERZOO generators are CE certified and conform to the following Directives:

- •EN 12100: 2010, EN ISO 8528-13: 2016, EN 60204-1: 2018,
- •EN 61000-6-2: 2019, 2006/42/CE Machinery safety
- •2014/35/EU Low voltage
- •2014/30/EU Electromagnetic compatibility
- •Power according to ISO 8528 and ISO 3046
- $\mbox{^{\circ}}\mbox{Ambient}$ reference conditions 1000 mbar, 25 $\mbox{^{\circ}}\mbox{^{\circ}}\mbox{^{\circ}}$ C, 30% relative humidity. Information based on standard specification equipment unless otherwise stated.

	GENERATOR MODEL			P300P5		
	Generator specificationsl		PRP	ESP		
•	Power	kW/kVA	240/300	271/339		
(2)	Rated speed	r.p.m.	1500			
v	Available voltages	V	380~415			
50 60 HZ	Frequency	Hz	50			
3	Phase		3-PH			
	Power factor	Cos Φ	0.8			
	Fuel cons 100%	L/H	62.9			
	Starting power	kW	8			
âñ	Recommended battery	Ah	1	20		
_	Number of batteries		2			
	Auxiliary voltage	VDC	2	24V		
















Dimension and Weight

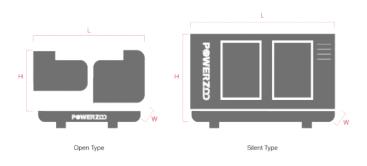

	DIMENSION		OPEN TYPE	SILENT TYPE
多品	Length (L)	mm	2820	3962
Ø.#1	Width (W)	mm	1380	1350
	Height (H)	mm	1650	2152
Kg	Dry weight	kg	2550	3150
	Fuel tank	L	470	470

POWERZOO has the right to modify any feature without prior notice. Weights and dimensions based on standard products. Illustrations may include optional equipment. Technical data described in this catalogue correspond to the available information at the moment of printing. The illustrations and images are indicative and may not coincide in their entirety with the product. Industrial design under patent.









Engine Specifications

ENGINE	Perkins [®]	
Engine model	1706A-E93TAG1	
Number of cylinders	6	
Cylinder arrangement	in-line	
Cycle	Four stroke	
Aspiration	turbocharged aftercooled	
Bore × Stroke	115*149 mm	
Displacement	9.29 L	
Compression ratio	16.5:1	
Prime power/Speed	276.3/1500 (kW/rpm)	
Standby power/Speed	303.9/1500 (kW/rpm)	
Speed governor	ECU	
Cooling system (open type)	40°C tropical radiator	
Cooling system (silent type)	50°C tropical radiator	

ENGINE	Perkins [®]	
Total lubrication system capacity	30 L	
Coolant capacity (with radiator)	35.8 L	
Speed stability (%)	≤5%	
Start type	Electrical	
Maximum exhaust temperature	538.1°C	
Exhaust gas flow	41.74 m³/min	
Maximum allowed back pressure	10 kPa	
Intake air flow	15.52 m³/min	
Cooling air flow	ТВА	
Consumption @ 100% load ESP	62.5 L/H	
Consumption @ 100% load PRP	62.9 L/H	
Consumption @ 75% load PRP	64.2 L/H	
Consumption @ 50% load PRP	67.9 L/H	



Features:

- •Diesel engine
- •4-stroke cycle
- •Water-cooled

- •Dry air filter
- •Radiator with pusher fan
- •Moving parts protection
- •Radiator water level sensor (Optional)
- •55 degree radiator (Optional)

- Jacket coolant heater (Optional)
- •Lube oil heater (Optional)
- •Engine filter heater (Optional)
- •Fuel inlet line heater (Optional)
- •Heavy duty air filter (Optional)



Alternator Specification

ALTERNATOR	
Exciter type	Brushless, self-excited
Power factor	0.8
Voltage adjust range	≥5%

ALTERNATOR	
Voltage regulation NL-FL	≤±1.0%
Insulation grade	Н
Protection grade	IP23



Options:

- •AREP/PMG/EBS
- •Air inlet filter (5% deration)
- •louver (5% deration)
- •Space heater
- Digital AVR
- •Severe environmental impregnation
- •Stator sensor
- •PT100

- •Rotor sensor
- Double bearing
- •Drip proof cover
- •Terminal box IP44









Controller Brands















Woodward



Controller Functions

OPTIONAL CONFIGURATION	Stand-alone Basic	Stand-alone Advanced	Synchronization Basic	Synchronization Advanced
Voltage between phases	•	•	•	•
Voltage between neutral and phase	•	•	•	•
Current intensities	•	•	•	•
Frequency	•	•	•	•
Apparent power (kVA)	•	•	•	•
Active power (kW)	•	•	•	•
Reactive power (kVAr)	•	•	•	•
Power factor	•	•	•	•
Coolant temperature	•	•	•	•
Oil pressure	•	•	•	•
Battery voltage	•	•	•	•
R.P.M.	•	•	•	•
Battery charge alternator voltage	•	•	•	•
High water temperature by sensor	•	•	•	•
Low oil pressure by sensor	•	•	•	•
Unexpected shutdown	•	•	•	•
Fuel storage by sensor	•	•	•	•
Stop failure/Start failure	•	•	•	•
Overspeed/Underspeed	•	•	•	•

● Standard ○ Optional







Emergency stop High/Low frequency High/Low voltage Short-circuit Incorrect phase sequence Inverse power Overload Total hour counter Kilowett meter Starts valid counters Maintenance USB Software for PC Alarm history Starten start Start Inhibition Mains failure start Pre-heating angine control Engine temperature control Engine temperature control Programmable alarms Genset start function in test mode Programmable outputs Modbus IP J1939 Synchronization Mains synchronization Fuel level (%) Low water level GSMY GPPS modem Remote screen A	OPTIONAL CONFIGURATION	Stand-alone Basic	Stand-alone Advanced	Synchronization Basic	Synchronization Advanced
High/Low voltage Short-circuit Incorrect phase sequence Inverse power Overload Total hour counter Kilowatt meter Starts valid counters Maintenance ISS Software for PC Alarm history External start Start inhibition Mains failure start Pre-heating engine control Fuel transfer control Fuel transfer control Fuel gename be a sequence ISS Sansa Sansa ISS Modus IP J1939 Synchronization Mains synchronization Fuel level (%) Low water level GSMC PRS modem ISS INCORRECT INC	Emergency stop	•	•	•	•
Short-circuit	High/Low frequency	•	•	•	•
Incorrect phase sequence Inverse power Overload	High/Low voltage	•	•	•	•
Inverse power	Short-circuit	•	•	•	•
Overload •<	Incorrect phase sequence	•	•	•	•
Total hour counter	Inverse power	•	•	•	•
Kilowatt meter • • • Starts valid counters • • • Maintenance • • • USB • • • Software for PC • • • Alarm history • • • External start • • • Start inhibition • • • Mains failure start • • • Pre-heating engine control • • • Fuel transfer control • • • Engine temperature control • • • Engine temperature control • • • Programmable alarms • • • Genset start function in test mode • • • Programmable outputs • • • Multilingual • • • RS485 • • • Modbus IP • • • J1939 • • •<	Overload	•	•	•	•
Starts valid counters •	Total hour counter	•	•	•	•
Maintenance	Kilowatt meter	•	•	•	•
USB	Starts valid counters	•	•	•	•
Software for PC •	Maintenance	•	•	•	•
Alarm history External start Start inhibition Mains failure start Pre-heating engine control Fuel transfer control Engine temperature control Programmable alarms Genset start function in test mode Programmable outputs Multilingual RS485 Modbus IP J1938 Synchronization Mains synchronization Fuel level (%) Low water level GSM/GPRS modem	USB	•	•	•	•
External start • • • • Start inhibition • • • • Mains failure start • • • • Pre-heating engine control • • • • Fuel transfer control • • • • Engine temperature control • • • • Programmable alarms • • • • Genset start function in test mode • • • • Programmable outputs • • • • Multilingual • • • • RS485 • • • • Modbus IP • • • • J1939 • • • • Synchronization • • • • Mains synchronization • • • • Fuel level (%) • • • • Low water level • • • •	Software for PC	•	•	•	•
Start inhibition • • • Mains failure start • • • Pre-heating engine control • • • Fuel transfer control • • • Engine temperature control • • • Programmable alarms • • • Genset start function in test mode • • • Programmable outputs • • • Multilingual • • • RS485 • • • Modbus IP • • • J1939 • • • Synchronization • • • Mains synchronization • • • Fuel level (%) • • • Low water level • • • GSM/GPRS modem • • •	Alarm history	•	•	•	•
Mains failure start •	External start	•	•	•	•
Pre-heating engine control • </td <td>Start inhibition</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	Start inhibition	•	•	•	•
Fuel transfer control Engine temperature control Programmable alarms Genset start function in test mode Programmable outputs Multilingual RS485 Modbus IP J1939 Synchronization Mains synchronization Fuel level (%) Low water level GSM/GPRS modem	Mains failure start	•	•	•	•
Engine temperature control • </td <td>Pre-heating engine control</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	Pre-heating engine control	•	•	•	•
Programmable alarms •	Fuel transfer control	•	•	•	•
Genset start function in test mode ● ● ● Programmable outputs ● ● ● Multilingual ● ● ● RS485 ● ● ● Modbus IP ● ● ● J1939 ● ● ● Synchronization ● ● ● Mains synchronization ● ● ● Fuel level (%) ● ● ● Low water level ● ● ● GSM/GPRS modem ● ● ●	Engine temperature control	•	•	•	•
Programmable outputs ● ● ● Multilingual ● ● ● RS485 ● ● ● Modbus IP ● ● ● J1939 ● ● ● Synchronization ● ● ● Mains synchronization ● ● ● Fuel level (%) ● ● ● Low water level ● ● ● GSM/GPRS modem ● ● ●	Programmable alarms	•	•	•	•
Multilingual • • • • RS485 • • • • Modbus IP • • • • J1939 • • • • Synchronization • • • • Mains synchronization • • • • Fuel level (%) • • • • Low water level • • • • GSM/GPRS modem • • • •	Genset start function in test mode	•	•	•	•
RS485 • • • Modbus IP • • • J1939 • • • Synchronization • • • Mains synchronization • • • Fuel level (%) • • • • Low water level • • • • GSM/GPRS modem • • • •	Programmable outputs	•	•	•	•
Modbus IP ● ● J1939 ● ● Synchronization ● ● Mains synchronization ● ● Fuel level (%) ○ ○ ○ Low water level ○ ○ ○ GSM/GPRS modem ○ ○ ○	Multilingual	•	•	•	•
J1939 • • • Synchronization • • • Mains synchronization • • • Fuel level (%) • • • • Low water level • • • • • GSM/GPRS modem • • • • •	RS485		•	•	•
Synchronization • • Mains synchronization • • Fuel level (%) • • • Low water level • • • • GSM/GPRS modem • • • •	Modbus IP		•	•	•
Mains synchronization ● Fuel level (%) ○ ○ ○ ○ Low water level ○ ○ ○ ○ GSM/GPRS modem ○ ○ ○ ○	J1939		•	•	•
Fuel level (%) 0 0 0 Low water level 0 0 0 GSM/GPRS modem 0 0 0	Synchronization			•	•
Low water level 0 0 0 GSM/GPRS modem 0 0 0	Mains synchronization				•
GSM/GPRS modem	Fuel level (%)	0	0	0	0
	Low water level	0	0	0	0
Remote screen o o o	GSM/GPRS modem	0	0	0	0
	Remote screen	0	0	0	0

● Standard ○ Optional

