Y10P5 Powered by YANMAR®



PØWERZOD



Emergency Standby Power (ESP):

Applicable for supplying power to varying electrical load for the duration of power interruption of a reliable utili ty source. Emergency Standby Power (ESP) is in accordance with ISO 8528. Fuel Stop power in accordance with ISO 3046, AS 2789, DIN 6271 and BS 5514. Prime Power (PRP):

Applicable for supplying power to varying electrical load for unlimited hours. Prime Power (PRP) is in accordance with ISO 8528. Ten percent overload capabili ty is avai lable in accordance with ISO 3046, AS 2789, DIN

6271 and BS 5514.

Continuous Power (COP):

Applicable for supplying power continuously to a constant electrical load for unlimi ted hours. Continuous Power (COP) in accordance wi th ISO 8528, ISO 3046, AS 2789, DIN6271 and BS 5514.

POWERZOO generators are CE certified and conform to the following Directives:

•EN 12100: 2010, EN ISO 8528-13: 2016, EN 60204-1: 2018,

•EN 61000-6-2: 2019, 2006/42/CE Machinery safety

•2014/35/EU Low voltage

FREQUENCY


•2014/30/EU Electromagnetic compatibility

•Power according to ISO 8528 and ISO 3046

•Ambient reference conditions 1000 mbar, 25° C, 30% relative humidity. Information based on standard specification equipment unless otherwise stated.

GENERATOR MODEL			Y10P5		
	Generator specificationsl		PRP	ESP	
9	Power	kW/kVA	8/10 8.8/11		
0	Rated speed	r.p.m.	1500		
V	Available voltages	V	380~415		
50 60 HZ	Frequency	Hz	50		
3 ⊭	Phase		3-PH		
	Power factor	$\cos \phi$	0.8		
٦	Fuel cons 100%	L/H	2.89		
ŝ	Starting power	kW	1.2		
	Recommended battery	Ah		45	
	Number of batteries			1	
	Auxiliary voltage	VDC	1	2V	

Dimension and Weight

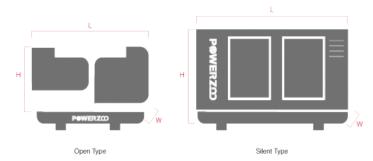

	DIMENSION		OPEN TYPE	SILENT TYPE
び正	Length (L)	mm	1460	1800
	Width (W)	mm	730	750
	Height (H)	mm	1170	1050
Kg	Dry weight	kg	510	610
	Fuel tank	L	55	55

NC

ISO 9001

STACKABLE

POWERZOO has the right to modify any feature without prior notice. Weights and dimensions based on standard products. Illustrations may include optional equipment. Technical data described in this catalogue correspond to the available information at the moment of printing. The illustrations and images are indicative and may not coincide in their entirety with the product. Industrial design under patent.







Engine Specifications

ENGINE	YANMAR®	ENGINE	YANMAR®
Engine model	3TNV82A-GGE	Total lubrication system capacity	5.5 L
Number of cylinders	3	Coolant capacity	1.8 L
Cylinder arrangement	Vertical in-line	Speed stability (%)	≤5%
Cycle	Four stroke	Start type	Electrical
Combustion system	Direct injection	Maximum exhaust temperature	TBD
Bore × Stroke	82 × 84 mm	Exhaust gas flow	TBD
Displacement	1.331 L	Maximum allowed back pressure	TBD
Compression ratio	19.2:1	Intake air flow	TBD
Rated output/Speed	11/1500 (kW/rpm)	Water flow to engine	TBD
Continuous rating/Speed	9.9/1500 (kW/rpm)	Consumption @ 100% load ESP	3.2 L/H
Speed governor	Mechanical	Consumption @ 100% load PRP	2.89 L/H
Cooling system (open type)	40°C tropical radiator	Consumption @ 75% load PRP	2.16 L/H
Cooling system (silent type)	$50^\circ\!\!\mathbb{C}$ tropical radiator	Consumption @ 50% load PRP	1.45 L/H



- Diesel engine4-stroke cycleWater-cooled
- •Dry air filter
- •Radiator with pusher fan
- •Moving parts protection
- •Radiator water level sensor (Optional)
- •55 degree radiator (Optional)

- •Jacket coolant heater (Optional)
- •Lube oil heater (Optional)
- •Engine filter heater (Optional)
- •Fuel inlet line heater (Optional)
- •Heavy duty air filter (Optional)

Alternator Specification

ALTERNATOR		ALTERNATOR	
Exciter type	Brushless, self-excited	Voltage regulation NL-FL	≤±1.0%
Power factor	0.8	Insulation grade	н
Voltage adjust range	≥5%	Protection grade	IP23



Options:

- •AREP/PMG/EBS
- •Air inlet filter (5% deration)
- •louver (5% deration)
- •Space heater
- Digital AVR
- •Severe environmental impregnation
- •Stator sensor
- •PT100

•Rotor s	sensor
----------	--------

- •Double bearing
- •Drip proof cover
- •Terminal box IP44




E-mail: info@powerzoos.com Tel: +86 13358296663

P\$WERZOD



Y10P5

Controller Brands

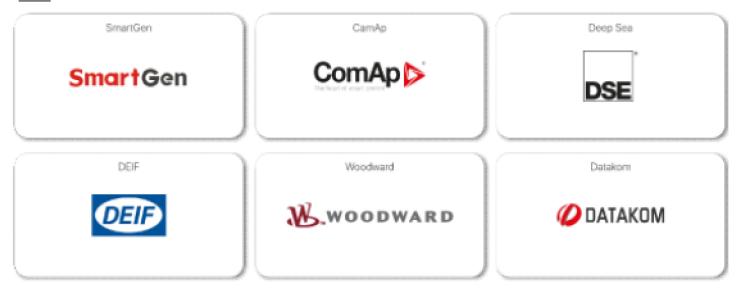

Controller Functions

Voltage between phasesImage shows and sho	OPTIONAL CONFIGURATION	Stand-alone Basic	Stand-alone Advanced	Synchronization Basic	Synchronization Advanced
Current intensitiesImage: set of the set	Voltage between phases	•	•	•	•
FrequencyImage: set of the set	Voltage between neutral and phase	•	•	•	•
Apparent power (kVA)Image: state of the state	Current intensities	•	•	•	•
Active power (kW)••••••Reactive power (kVAr)••••••••Power factor••••••••••Coolant temperature••••••••••Oil pressure••••••••••Battery voltage••••••••••R.P.M.••••••••••Battery charge alternator voltage••••••••High water temperature by sensor••••••••Low oil pressure by sensor••••••••Unexpected shutdown••••••••Fuel storage by sensor••••••••Interperature by sensor••••••••<	Frequency	•	•	•	•
Reactive power (kVAr)Image: section of the section of th	Apparent power (kVA)	•	•	•	•
Power factorImage: selection of the selection of	Active power (kW)	•	•	•	•
Coolant temperatureImage: Coolant temperatureImage: Coolant temperatureOil pressureImage: Coolant temperatureImage: Coolant temperatureBattery voltageImage: Coolant temperatureImage: Coolant temperatureR.P.M.Image: Coolant temperatureImage: Coolant temperatureBattery charge alternator voltageImage: Coolant temperatureImage: Coolant temperatureHigh water temperature by sensorImage: Coolant temperatureImage: Coolant temperatureLow oil pressure by sensorImage: Coolant temperatureImage: Coolant temperatureUnexpected shutdownImage: Coolant temperatureImage: Coolant temperatureFuel storage by sensorImage: Coolant temperatureImage: Coolant temperature </td <td>Reactive power (kVAr)</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td>	Reactive power (kVAr)	•	•	•	•
Dil pressure••••Battery voltage•••••R.P.M.••••••Battery charge alternator voltage••••••High water temperature by sensor•••	Power factor	•	•	•	•
Battery voltage•••R.P.M.••••Battery charge alternator voltage••••High water temperature by sensor•••••Low oil pressure by sensor••••••Unexpected shutdown•••••••Fuel storage by sensor•••••••	Coolant temperature	•	•	•	•
R.P.M.••••••Battery charge alternator voltage••••••High water temperature by sensor••••••Low oil pressure by sensor••••••Unexpected shutdown••••••Fuel storage by sensor••••••	Oil pressure	•	•	•	•
Battery charge alternator voltage••••High water temperature by sensor•••••Low oil pressure by sensor•••••Unexpected shutdown•••••Fuel storage by sensor•••••	Battery voltage	•	•	•	•
High water temperature by sensor••••Low oil pressure by sensor•••••Unexpected shutdown•••••Fuel storage by sensor•••••	R.P.M.	•	•	•	•
Low oil pressure by sensor•••Unexpected shutdown••••Fuel storage by sensor••••	Battery charge alternator voltage	•	•	•	•
Unexpected shutdown•••Fuel storage by sensor•••	High water temperature by sensor	•	•	•	•
Fuel storage by sensor • • •	Low oil pressure by sensor	•	•	•	•
	Unexpected shutdown	•	•	•	•
Stop failure/Start failure • • •	Fuel storage by sensor	•	•	•	•
	Stop failure/Start failure	•	•	•	•
Overspeed/Underspeed • • •	Overspeed/Underspeed	•	•	•	•

● Standard ○ Optional







P%WERZOD

OPTIONAL CONFIGURATION	Stand-alone Basic	Stand-alone Advanced	Synchronization Basic	Synchronization Advanced
Emergency stop	•	•	•	•
High/Low frequency	•	•	•	•
High/Low voltage	•	•	•	•
Short-circuit	•	•	•	•
Incorrect phase sequence	•	•	•	•
Inverse power	•	•	•	•
Overload	•	•	•	•
Total hour counter	•	•	•	•
Kilowatt meter	•	•	•	•
Starts valid counters	•	•	•	•
Maintenance	•	•	•	•
USB	•	•	•	•
Software for PC	•	•	•	•
Alarm history	•	•	•	•
External start	•	•	•	•
Start inhibition	•	•	•	•
Mains failure start	•	•	•	•
Pre-heating engine control	•	•	•	•
Fuel transfer control	•	•	•	•
Engine temperature control	•	•	•	•
Programmable alarms	•	•	•	•
Genset start function in test mode	•	•	•	•
Programmable outputs	•	•	•	•
Multilingual	•	•	•	•
RS485		•	•	•
Modbus IP		•	•	•
J1939		•	•	•
Synchronization			•	•
Mains synchronization				•
Fuel level (%)	0	0	0	0
Low water level	0	0	0	0
GSM/GPRS modem	0	0	0	0
Remote screen	0	0	0	0

• Standard O Optional

PØWERZOD

E-mail: info@powerzoos.com Tel: +86 13358296663